

# CaskWidge

CELLAR EQUIPMENT

## Dipstick and Clarity Sampler - User Guide


### Retain the Widge Postal Tube for cleaning and Storage Purposes

Before using your Widge Dipstick or Widge Sampler for the first time, please follow the cleaning instructions and then remember to clean between each use, this will eliminate any risk of cross contamination between casks.




### User instructions - CaskWidge Dipstick

- Please make sure the widge dipstick is meticulously clean and dry before use. Dirty equipment could contaminate your beer and dramatically reduce the shelf life and beer quality.
- To dip a cask that is on-line, please wait till the end of session or last thing at night to give the cask chance to re-settle. Be careful to limit any unnecessary movement.
- Remove the Black 'T Piece' by twisting to unlock the tabs and then gently lift the float part or all the way out of the cask. Be careful to only lay the float on a clean surface never on the floor whilst dipping the cask.
- Lower the widge dipstick very gently down through the middle of the cask tap.
- Remove and read.
- When finished and replacing the float lower it in slowly part way and wait for it to re-find its float position before lowering the rest of the tube down through the cask tap.
- Lock the Black 'T' Piece back into place under the tabs.

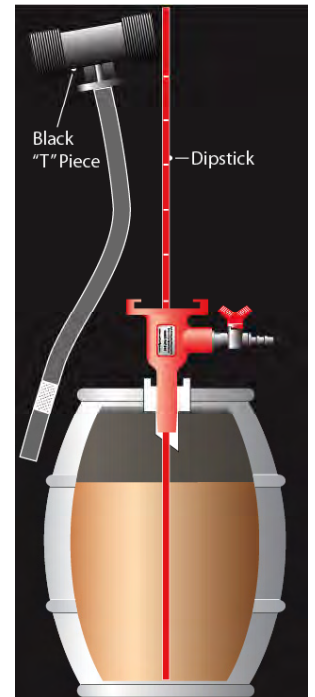

### User instructions - CaskWidge Clarity Sampler

- Please make sure the sampler is meticulously clean and dry before use. Dirty equipment could contaminate your beer and dramatically reduce the shelf life and beer quality.
- To take a sample first remove the tapping cap from the top of the cask tap. Remove the bung from the bottom of the sampler and lower gently and slowly through the centre of the cask tap.
- Avoid touching the bottom of the cask and try to limit any unnecessary movement.
- Pull red handle up firmly to replace the bung. Lift sampler out gently; hold sample to the light to check clarity. The sample can then be poured through the open top into a glass for testing.

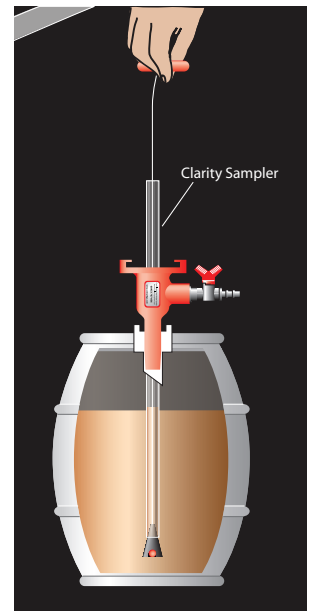

### Cleaning instructions

- Clean the CaskWidge Dipstick with hot soapy water. Rinse and store using the Widge Postal Tube. Do not leave equipment on the floor.
- To clean the CaskWidge Sampler, simply turn the red handle lengthways and insert into the tube and use the bung to pull it through. Clean the tube with non-caustic detergent and the red nylon brush provided. Rinse and dry, then insert the red handle back into the tube and push back into place.
- Store using the Widge Postal Tube. Do not leave equipment on the floor.



CHEERS!

Tel: 08453 707 606  
[www.caskwidge.com](http://www.caskwidge.com)  
(for all downloadable user guides)